

PHONIC

PHONIC
WWW.PHONIC.COM

AURRAS 6A
AURRAS 8A

Powered Nearfield Studio Monitor 有源监听喇叭

User's Manual

用户手册

简体中文

索引

1. 重要安全说明
2. 后面板说明
3. 后面板说明
4. 连接

V1.0 30/05/2022

5. 连接
6. 调节音量/高音
7. 技术信息
8. 服务与维修

重要安全说明

重要安全说明

- 请阅读这些说明—使用本产品前应阅读所有安全和操作说明。
- 保存这些说明—应保存安全和操作说明，以备将来使用。
- 请注意所有警告信息—应严格遵守设备上和操作说明中的所有警告信息。
- 遵照所有说明—应遵照所有操作和使用说明。

警告！

- 警告—为降低火灾或触电危险，请勿让本设备淋雨或受潮。不得将本设备暴露在滴水或溅水的环境中，也不得将本设备摆放在花瓶等盛水容器附近。
- 警告—请勿使用物体覆盖。
- 警告—仅能使用制造商指定的附件/配件。
- 警告—插头是主要的断开装置，应将其用于此类目的。该断开装置应放在便于拿取的地方。
- 警告—本有源音箱可发出很高的声压水平。
- 警告—听音乐时，请勿离有源音箱太近。
- 警告—请勿长时间听听高压音乐。
- 警告—请勿尝试拆卸有源音箱机箱，用户不得擅自维修任何部件。
- 警告—不得将吉他插入本有源音箱。
- 警告—不得将身体部位或物体插入低音端口，否则会有受伤危险。
- 危险—防止本产品落下。
- 危险—小心尖角。



水分与湿度

本有源音箱应放置于干燥无水的地方。
请勿在水的附近使用本设备。请勿让设备淋雨或接触滴水。请勿让设备溅水。

安装

请勿在散热器、热配风器、火炉或释放热量的其他设备（包括扩音器）等热源附近安装本设备。
• 请勿将点燃的蜡烛等明火源放在本设备上。
• 请勿阻塞任何通风口。请按照制造商的说明进行安装。

连接

- 根据本手册中的相关说明，连接有源音箱。
- 根据设备所示，仅将有源音箱连接至正确的电源电压。
- 防止踩踏或挤压电源线，尤其是插头、插座以及及设备连接处。
- 只能使用操作说明指定或有源音箱上标识的电源线类型。不得使用其他任何电源替换本有源音箱包含的电源线，只能使用制造商提供的电源线。
- 在雷电天气或长时间不使用时，请拔掉设备插头。
- 请勿在电源插头连接不便的区域安装设备。断开电源插头连接是彻底将产品断电的唯一方法，此外，须将插头放在随时便于拿取的地方。

清洁

• 只能用干布清洁。

维护

- 请具有资质的维修人员进行所有维修工作。设备因以下任何原因而受损时必须维修。
电源线或插头损坏、溅入液体或物体进入设备中、设备淋雨或受潮、无法正常操作或从高空掉落。
- 注意：这些维修说明仅供具备资质的维修人员使用，为了降低触电危险，如果您不具备相关资质，请勿擅自进行任何维修工作。



这个三角形闪电标志是用来警告用户，装置内的非绝缘危险电压足以造成使人触电的危险性。

 


这个三角形惊叹号标志是用来警告用户，随机使用手册中有重要操作与保养维修说明。

警告：为减少火灾或触电的危险性，请勿将本机暴露于雨天或潮湿的地方。

注意：任何未经本使用手册许可的操控，调整或设定步骤都可能产生危险的电磁辐射。

后面板说明

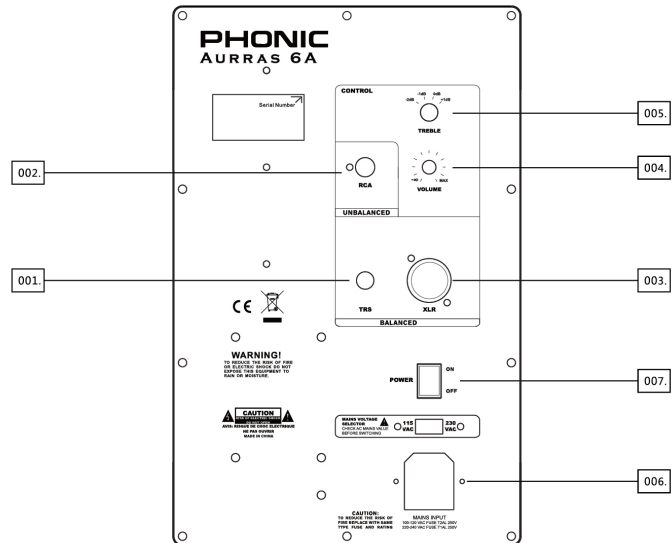

后面板说明

- 001. TRS输入：用于连接平衡或非平衡音源。
- 002. RCA输入：用于连接非平衡音源。
- 003. XLR输入：用于连接平衡音源。
- 004. 音量调节钮：调节功放的音量。
- 005. 高音调节钮：调节功放的高音。
- 006. 电源插座
- 007. 电源开关


连接

XLR平衡输入连接说明：

PIN 1 : 地线 (屏蔽)

PIN 2 : 热端 (+)

 PIN 3 : 冷端 (-)

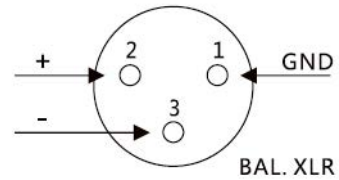

连接

• 连接之前：

首先要确认扬声器上电压选择器是否处于您所在国家的合适位置(115V/230V)。如有必要更改电压，请联系您的供应商，该操作需要更换保险丝规格。

在连接之前确保电源开关处于关闭状态。

• 连接：

此时你可以连接电源线和信号线，但是在开机之前确保音量调到最小。

 
• 开关机顺序：

开机时最后打开音箱电源，关机时最先关闭音箱电源。

• 现在你可以打开音响设备和调节音量到正常水平。

调节音量 / 高音

001. 调节音量：调节VOLUME旋钮，
调整功放的音量。
002. 调节高音：调节TREBLE旋钮，
调整功放的高音。

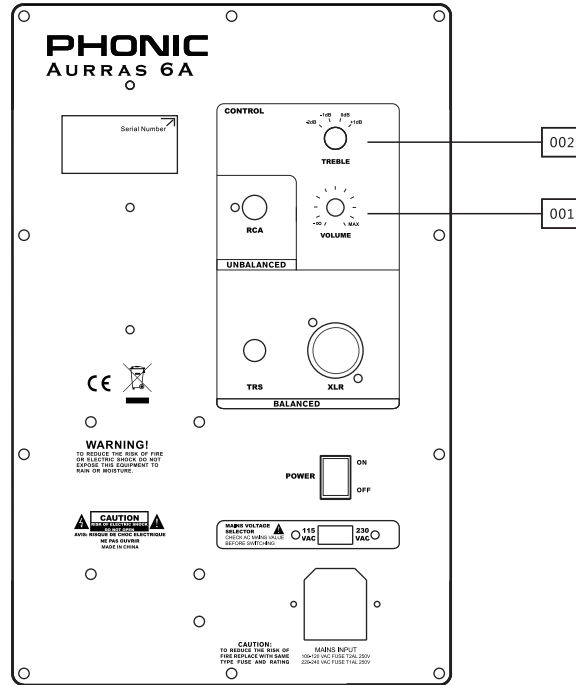

Aurras 6A / Aurras 8A

技术信息

型号	Aurras 6A	Aurras 8A
类型	两音路有源监听喇叭	两音路有源监听喇叭
高音单体	1" 丝绸柔软球顶	1" 丝绸柔软球顶
低音单体	6.5" 酰胺纤维	8" 酰胺纤维
频率响应 (+/-3dB)	55 Hz - 20 kHz	45 Hz - 20 kHz
高音功放 (瓦特数)	28W	36W
低音功放 (瓦特数)	45W	75W
输入灵敏度	-2 dBu	-2 dBu
高音调整	(-2 dB, -1 dB, FLAT, +1 dB)	(-2 dB, -1 dB, FLAT, +1 dB)
输入端	RCA, 平衡 1/4" TRS, 平衡 XLR	RCA, 平衡 1/4" TRS, 平衡 XLR
分频点	1.9 kHz	1.8 kHz
最大音压	90dB	100dB
颜色	黑/白	黑/白
尺寸 (宽 x 高 x 深)	270 x 230 x 320 mm	310 x 270 x 380 mm
重量	9.2 Kg	12.6 Kg

Aurras 6A / Aurras 8A

PHONIC保有资料内容修改无需事先通知的权利!

服务与维修

服务与维修

如需更换零件,服务和维修,请联系您所在国家的Phonic代理商。Phonic不向用户提供维修手册,且建议用户不要擅自维修机器,否则将无法获得任何保修服务。您可登录<https://www.phonic.com/index.php/where-to-buy>查找离您最近的代理商。

保修

Phonic承诺对每件产品提供完善的保修服务。根据所在地区的不同,保修时间或有延长。自原始购买之日起,Phonic即对在严格遵照使用说明书的操作规范下,因产品材质和做工所产生的问题提供至少1年的保修服务。Phonic可根据保修条例自行选择维修或更换缺陷产品。请务必妥善保管购买凭证,以此获得保修服务。保修服务只适用于正常使用下所产生的问题。用户须严格遵照使用说明书正确使用产品,任何因肆意损坏、擅自维修、意外事故、错误使用或人为疏忽所造成的问题,都不再保修受理范围之内。此外,担保维修只适用于在授权代理商处的有效购买。如需了解全部保修信息,请登录<http://www.phonic.com/>。

客户服务和技术支持

敬请访问<http://www.phonic.com/support/>。从该网站上,您可获得各种常见问题的解答,技术指导,并可下载产品驱动,获得有关退货指导以及其它有用的信息。我们将竭尽全力在两个工作日内回复您的问题。

support@phonic.com
<http://www.phonic.com>

PHONIC

10. IMPORTANT SAFETY INSTRUCTIONS
 11. REAR PANEL
 12. REAR PANEL
 13. CONNECTIONS

14. CONNECTIONS
 15. ADJUSTING THE VOLUME/TREBLE
 16. TECHNICAL INFORMATION
 17. SERVICE AND REPAIR

IMPORTANT SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions-All the safety and operating instructions should be read before this product is operated.
- Keep these instructions-The safety and operating instructions should be retained for future reference.
- Heed all warnings-All warnings on the appliance and in the operating instructions should be adhered to.
- Follow all instructions-All operating and use instructions should be followed.

WARNING!

- WARNING – To reduce the risk of fire or electric shock,do not expose this apparatus to rain or moisture.
- WARNING – do not cover.
- WARNING – only use attachments/accessories specified by the manufacturer.
- WARNING – the plug is the main disconnect device and should be used as such.
- WARNING – this active loudspeaker may emit high sound pressure levels.
- WARNING – do not listen too close to the active loudspeaker.
- WARNING – do not listen for an extended period of time at a high sound pressure level.
- WARNING – do not attempt to remove the active loudspeaker chassis,there are no user serviceable parts.
- WARNING – do not plug a guitar into The active loudspeaker.
- WARNING – do not insert body parts or objects into the bass port for risk of injury.
- DANGER – of dropping the product.
- DANGER – of sharp corners.

MOISTURE AND HUMIDITY

- The active loudspeaker should be located in a place free from moisture and water.
- Do not use this apparatus near water.Do not expose it to rain or dripping water.Do not splash water on it.

INSTALLATION

- Do not install near any heat sources such as radiators,heat registers,stoves,or other apparatus that produce heat.
- No naked flame sources,such as lighted candles,should be placed on the active loudspeaker.
- Do not block any ventilation openings.Install in accordance with the manufacturer's instructions.

CONNECTION

- Connect the active loudspeaker according to the instructions in the manual.
- Connect the active loudspeaker only to the correct mains voltage as shown on the equipment.
- Protect the power cord from being walked on or pinched particularly at plugs,convenience recepta-cles,and the point where they exit the apparatus.
- Use only power cables of the type specified in the operating instructions or as marked on the active loudspeaker.Do not substitute the separate power cable included with this active loudspeaker with any other power supply-use only the power cable provided by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Do not install in an area that impedes access to the power plug. Disconnecting the power plug is the only way to completely remove power to the product and the plug must be readily accessible at all times.

CLEANING

- Clean only with dry cloth.

MAINTENANCE

- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged,liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- CAUTION:These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing unless you are qualified to do so.

CAUTION: To reduce the risk of electric shock, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

 
The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

CAUTION: Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.

REAR PANEL

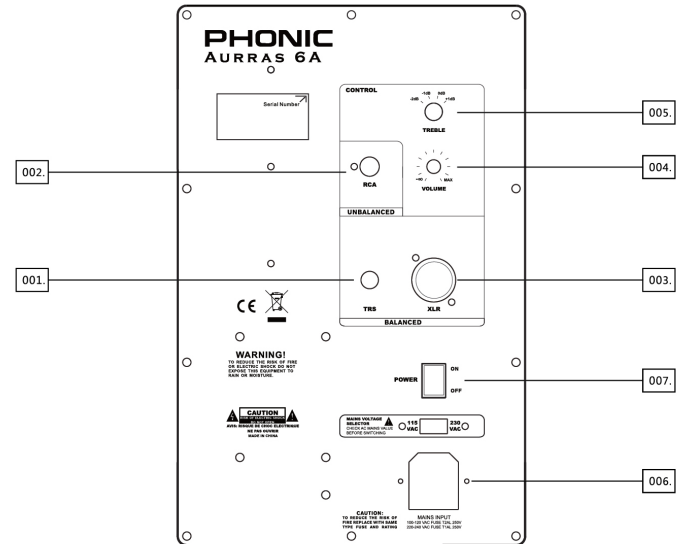

REAR PANEL

- 001. TRS INPUT: USED TO CONNECT BALANCED OR UNBALANCED AUDIO SOURCES.
- 002. RCA INPUT: USED TO CONNECT UNBALANCED AUDIO SOURCES.
- 003. XLR INPUT: USED TO CONNECT BALANCED AUDIO SOURCES.
- 004. VOLUME: ADJUST THE AMPLIFIER VOLUME.
- 005. TREBLE: ADJUST THE AMPLIFIER TREBLE.
- 006. POWER JACK.
- 007. POWER SWITCH.


CONNECTIONS

XLR BALANCED INPUT CONNECTION :

PIN 1 : GROUND(SHIELD)

PIN 2 : HOT(+)

 PIN 3 : COLD(-)

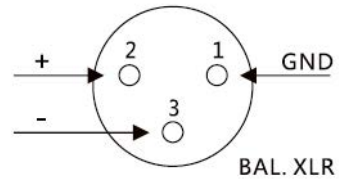

CONNECTIONS

• BEFORE CONNECTING:

KEEP POWER OFF, FIRST MAKE SURE THE INDICATED VOLTAGE IS SAME AS YOUR LOCATION VOLTAGE(115V/230V). DO CONTACT YOUR SUPPLIER TO CHANGE THE VOLTAGE BY REPLACING FUSE AND IF IN NEED.

• CONNECTION:

TURN DOWN VOLUME, THEN CONNECT POWER CORD AND SIGNAL LINE.

• TURN ON/OFF:

 
PRESS POWER BUTTON AT LAST TO TURN ON SPEAKER.
PRESS POWER BUTTON AT FIRST TO TURN OFF SPEAKER.

• TURN ON SPEAKER THEN KNOB TO NORMAL VOLUME.

ADJUSTING THE VOLUME/TREBLE

001. VOLUME:
ADJUST THE AMPLIFIER VOLUME.

002. TREBLE:
ADJUST THE AMPLIFIER TREBLE.

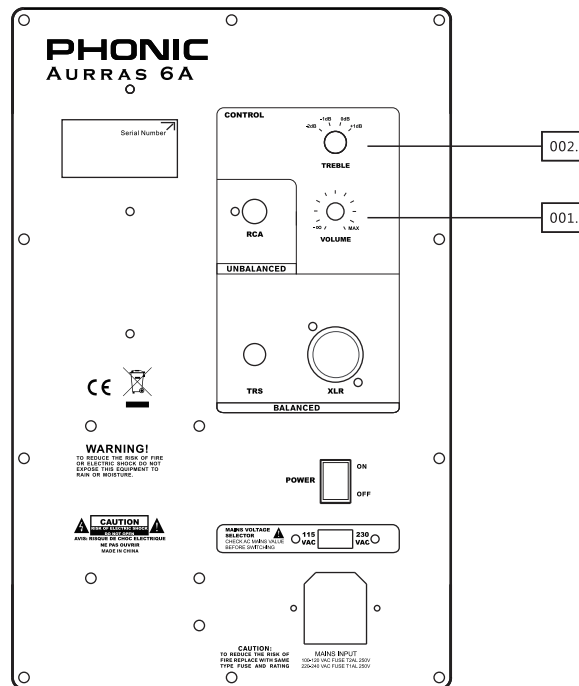

Aurras 6A / Aurras 8A

TECHNICAL INFORMATION

Model	Phonic Aurras 6A	Phonic Aurras 8A
Type	Powered Nearfield Studio Monitor	Powered Nearfield Studio Monitor
HF Drivers	1" Silk soft dome	1" Silk soft dome
LF Drivers	6.5" Glass Aramid cone	8" Glass Aramid cone
Frequency Response (+/-3dB)	55 Hz - 20 kHz	45 Hz - 20 kHz
High Frequency Rated Power (Watt)	28W	36W
Low Frequency Rated Power (Watt)	45W	75W
Input Sensitivity	-2 dBu	-2 dBu
HF Contour Control	(-2 dB, -1 dB, FLAT, +1 dB)	(-2 dB, -1 dB, FLAT, +1 dB)
Audio Input	RCA, Balanced 1/4" TRS, Balanced XLR	RCA, Balanced 1/4" TRS, Balanced XLR
Crossover	1.9 kHz	1.8 kHz
Maximum SPL	90dB	100dB
Color	Black/White	Black/White
Dimension (W x H x D)	270x 230 x 320 mm	313 x 268 x 383 mm
Weight	9.2 Kg	12.6 Kg

Aurras 6A / Aurras 8A

Phonic preserves the right to improve or alter any information within this document without prior notice

SERVICE AND REPAIR

SERVICE AND REPAIR

For replacement parts, service and repairs please contact the Phonic distributor in your country. Phonic does not release service manuals to consumers, and advice users to not attempt any self repairs, as doing so voids all warranties. You can locate a dealer near you at <https://www.phonic.com/index.php/where-to-buy>.

WARRANTY INFORMATION

Phonic stands behind every product we make with a no-hassles warranty. Warranty coverage may be extended, depending on your region. Phonic Corporation warrants this product for a minimum of one year from the original date of purchase against defects in material and workmanship under use as instructed by the user's manual. Phonic, at its option, shall repair or replace the defective unit covered by this warranty. Please retain the dated sales receipt as evidence of the date of purchase. You will need it for any warranty service. No returns or repairs will be accepted without a proper RMA number (return merchandise authorization). In order to keep this warranty in effect, the product must have been handled and used as prescribed in the instructions accompanying this warranty. Any tampering of the product or attempts of self repair voids all warranty. This warranty does not cover any damage due to accident, misuse, abuse, or negligence. This warranty is valid only if the product was purchased new from an authorized Phonic dealer/distributor. For complete warranty policy information please visit <http://www.phonic.com/>.

CUSTOMER SERVICE AND TECHNICAL SUPPORT

We encourage you to visit our online help at <https://www.phonic.com/index.php/support/digital-mixers>. There you can find answers to frequently asked questions, tech tips, driver downloads, returns instruction and other helpful information. We make every effort to answer your questions within one business day.

support@phonic.com
<http://www.phonic.com>

PHONIC