


PHONIC

BP-RG

Battery Pack

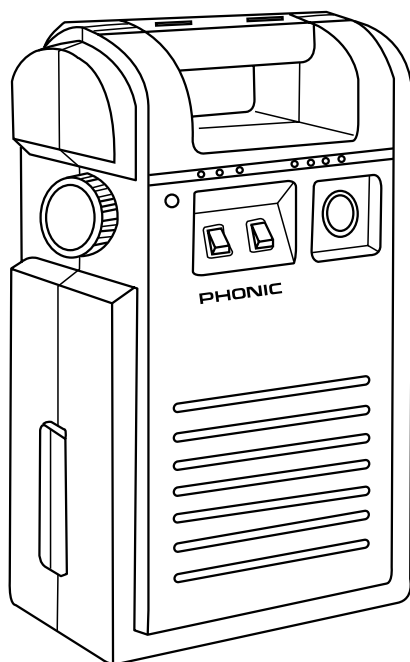

English



User's Manual

IMPORTANT SAFETY INSTRUCTIONS

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus. The MAINS plug is used as the disconnect device, the disconnect device shall remain readily operable.

Warning: the user shall not place this apparatus in the confined area during the operation so that the mains switch can be easily accessible.

1. Read these instructions before operating this apparatus.
2. Keep these instructions for future reference.
3. Heed all warnings to ensure safe operation.
4. Follow all instructions provided in this document.
5. Do not use this apparatus near water or in locations where condensation may occur.
6. Clean only with dry cloth. Do not use aerosol or liquid cleaners. Unplug this apparatus before cleaning.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plug, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
<p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED PERSONNEL</p>		



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

CAUTION: Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.



Attention:

1. Turn the power off when the unit is not in use as to save power.
2. When charging, stand the device upright.
3. Keep the device fully charged at all times as to ensure the best conditions for battery use are upheld. If battery remains unused for long periods of time, it will become dead and possibly damaged. Users are expected to ensure the battery remains charged to avoid this from occurring.
4. Please ensure the AC power charger supplied along with this device is used when charging. Phonic is not responsible for any damage to this, or any other device, when the device is used in an inappropriate nature.
5. In the event of battery failure, return the unit to the dealer from whom you purchased the device, for possible replacement at user's expense. Batteries should not be simply discarded, and must be disposed of responsibly.
6. Keep the unit away from direct sun light, extreme temperatures (either hot or cold), humidity, and liquids. Keep out of reach of children.
7. Do not touch the power plugs with any metal items to ensure short circuiting does not occur. In the event that short circuiting does occur, the fuse within the device will be burned out, and should be replaced with a new fuse. The device should work again after this is done.

Included Accessories:

One AC to DC recharge adaptor

FEATURES:

DC 12V 22 Ah Power supply converter


Rechargeable 12 DC-DC Converter to Offer the RoadGear a Mobile Power Supply

Compact Durable Design, yet Powerful Performance

Cigarette Lighter Socket for Expanding Application

Dimension: 225x95x325 (mm) / 8.88x3.75x12.8(inch)


Net Weight:7.75kg / (17.07lb)

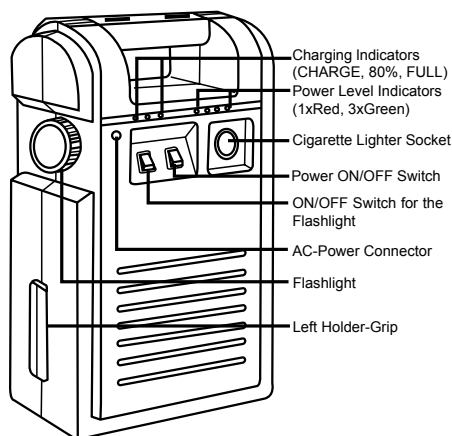

Front

Operating Instructions:

1. Connect the BP-RG to the DC-DC converter (CV-RG) and to the RoadGear unit. Ensure you correctly connect the positive and negative power terminals of the BG-RG to the DC-DC converter to avoid damaging equipment.
2. Turn the power switch on.
3. This device may be used and charged simultaneously, if required.
4. If needed, the light switch may be used to illuminate your environment. The light should last up to 25 hours.

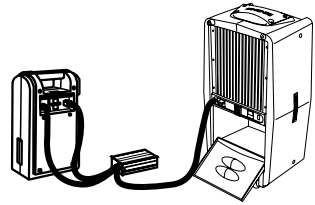


Charging Information:

1. Since the battery pack has no charge memory, it can be charged at anytime without having to discharge first.
2. The 4 LED charge indicators show the current charge of the battery pack. When the power charge is down to very low levels, the power will automatically cut out and a sound will alarm you to the need to charge. If the battery pack is then left without charge for a long period of time, it may become completely drained and thus cause serious damage to the battery

To Charge:

1. Plug the AC power adaptor to the wall outlet and plug the DC head into the battery pack. The charge LED will then illuminate to show the device is, indeed, charging. If the LED does not come on, then it may be because there is no power in the wall outlet you are using, or that either the AC adaptor or DC head are not correctly plugged in.
2. When the battery pack is almost full, the 80% LED indicator will light up. When this happens, it may take a while before the battery reaches full capacity, as the battery charges faster at low levels, then slows down somewhat at 80% until fully charged.
3. When the full indicator lights up the battery pack is then fully charged and charging will stop automatically to avoid causing overcharge damage.

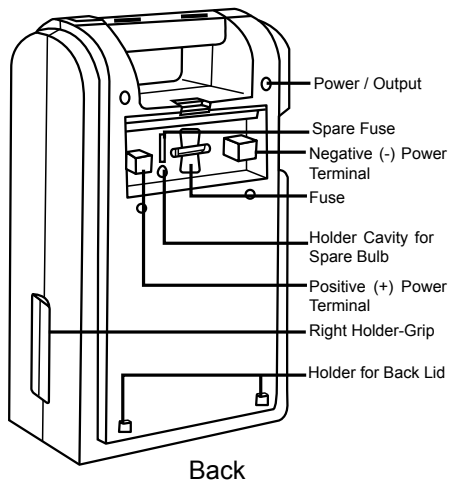

TO PURCHASE ADDITIONAL PHONIC GEAR AND ACCESSORIES

To purchase Phonic gear and optional accessories, contact any authorized Phonic distributor. For a list of Phonic distributors please visit our website at www.phonic.com and click on Get Gear. You may also contact Phonic directly and we will assist you in locating a distributor near you.

SERVICE AND REPAIR

For replacement parts, service and repairs please contact the Phonic distributor in your country. Phonic does not release service manuals to consumers, and advice users to not attempt any self repairs, as doing so voids all warranties. You can locate a dealer near you at <http://www.phonic.com/where/>.

WARRANTY INFORMATION

Phonic stands behind every product we make with a no-hassles warranty. Warranty coverage may be extended, depending on your region. Phonic Corporation warrants this product for a minimum of one year from the original date of purchase against defects in material and workmanship under use as instructed by the user's manual. Phonic, at its option, shall repair or replace the defective unit covered by this warranty. Please retain the dated sales receipt as evidence of the date of purchase. You will need it for any warranty service. No returns or repairs will be accepted without a proper RMA number (return merchandise authorization). In order to keep this warranty in effect, the product must have been handled and used as prescribed in the instructions accompanying this warranty. Any tempering of the product or attempts of self repair voids all warranty. This warranty does not cover any damage due to accident, misuse, abuse, or negligence. This warranty is valid only if the product was purchased new from an authorized Phonic dealer/distributor. For complete warranty policy information, please visit <http://www.phonic.com/warranty/>.

CUSTOMER SERVICE AND TECHNICAL SUPPORT

We encourage you to visit our online help at <http://www.phonic.com/support/>. There you can find answers to frequently asked questions, tech tips, driver downloads, returns instruction and other helpful information. We make every effort to answer your questions within one business day.

PHONIC

support@phonic.com <http://www.phonic.com>

PHONIC
WWW.PHONIC.COM